

## **Instructions for use of the 120L / 60L / 45L heating water bowl and a 20 L heating bucket**

(items 601415, 600592, 601414, 600593)

### **WARNING**

This product is intended for use outdoors or in cold areas and requires basic precautions to avoid electric shock, personal injury or product damage.

1. The product should be installed with an earth fault breaker.
2. To avoid electric shock, do not immerse the product or transformer in water.
3. Do not connect the product before it is filled with water. Keep refilling the water so you never run out of it.
4. Hide or protect the cord and transformer so that pets cannot chew them.
5. Do not cover the transformer, it gives off some heat and needs ventilation.
6. Be sure to make the 24V connections carefully to avoid water or condensation on the connections.
7. Always keep the 24V connector clean and put on the protective cap every time you disconnect the tub, to avoid poor contact and heat generation which can destroy it.
8. This product has a thermostat that turns off the heater when the water is within the appropriate temperature range.

The product keeps water ice-free at ambient temperatures down to -20°C in light winds. In cold weather, high wind speeds cool your device more, so you need to shield your device from the wind.

### **Practical tips**

- Run the bowl/bucket before the cold sets in. Do not thaw already frozen water.
- In extremely cold weather, do not fill completely and preferably fill with moderate water temperature.
- If the cable length is not enough, use a connection cable approved for outdoor use.
- Mount the transformer so that it is attached to a wall or pole so that pets can't get access to it.

### **Troubleshooting**

- Check that there is 230 V in the wall socket.
- Check if 24V is coming out of the transformer when connected, if not, replace the transformer.
- Check the cables to make sure there are no breaks.